

## Quick Color Match Supported Papers

Epson		SC-P800	SC-P600	SC-P400	Stylus Photo R3000	Stylus Photo R2000
<b>Worldwide</b>	<b>USA</b>					
Velvet Fine Art Paper	Velvet Fine Art Paper	Yes	Yes	Yes	Yes	Yes
Ultra Smooth Fine Art Paper	Ultra Smooth Fine Art Paper	Yes	Yes	Yes	Yes	Yes
Premium Glossy	Premium Photo Paper Glossy	Yes	Yes	Yes	Yes	Yes
Premium Semigloss	Premium Photo Paper Semigloss	Yes	Yes	Yes	Yes	Yes
Premium Luster	Ultra Premium Photo Paper Luster	Yes	Yes	Yes	Yes	Yes
Archival Matte	Ultra Premium Presentation Matte	Yes	Yes	Yes	Yes	Yes
Matte	Premium Presentation Paper Matte	No	No	Yes	Yes	Yes

Canon (worldwide)	PIXMA PRO-1	PIXMA PRO-10	PIXMA PRO-10S	PIXMA PRO-100	PIXMA PRO-100S	imagePROGRAF PRO-1000 (Asia: PRO-500)
Photo Paper Platinum	Yes	Yes	Yes	Yes	Yes	Yes
Photo Paper Plus Glossy	Yes	Yes	Yes	Yes*1*2	Yes*1*2	Yes*1*3
Photo Paper Pro Luster	Yes	Yes	Yes	Yes	Yes	Yes
Photo Paper Pro Premium Matte	Yes	Yes	Yes	Yes	Yes	Yes
Photo Paper Plus Semi-Gloss	Yes	Yes	Yes	Yes	Yes	Yes
Matte Photo Paper	Yes	Yes	Yes	Yes	Yes	Yes

<sup>1</sup> When using Photo Paper Plus Glossy with Canon PRO-100, PRO-100S, or PRO-1000, refer to the instructions on the packaging to match the paper type (Photo Paper Plus Glossy or Photo Paper Plus Glossy A) with your selection in Quick Color Match.

<sup>2</sup> Printer driver ver. 2.86 (Windows) or 16.0.5.0 (Mac) or later is required.

<sup>3</sup> Paper must be added via Media Configuration Tool.